

CAL1150 / CAL1200 ***Sound Level Calibrator***

Reference Manual



Copyright

Copyright 2024, by PCB Piezotronics, Inc. This manual is copyrighted, with all rights reserved. The manual may not be copied in whole or in part for any use without prior written consent of PCB Piezotronics, Inc.

Disclaimer

The following paragraph does not apply in any state or country where such statements are not agreeable with local law:

Even though PCB Piezotronics, Inc. has reviewed its documentation, PCB Piezotronics Inc. makes no warranty or representation, either expressed or implied, with respect to this instrument and documentation, its quality, performance, merchantability, or fitness for a particular purpose. This documentation is subject to change without notice, and should not be construed as a commitment or representation by PCB Piezotronics, Inc.

This publication may contain inaccuracies or typographical errors. PCB Piezotronics, Inc. will periodically update the material for inclusion in new editions. Changes and improvements to the information described in this manual may be made at any time.

Safety

If the equipment is used in a manner not specified by Larson Davis, the protection provided by the equipment may be impaired.

Recycling

PCB Piezotronics, Inc. is an environmentally friendly organization and encourages our customers to be environmentally conscious. When this product reaches its end of life, please recycle the product through a local recycling center or return the product to:



PCB Piezotronics, Inc.
Attn: Recycling Coordinator
1681 West 820 North
Provo, Utah, USA 84601-1341

Initial release date: March 31, 2025

Warranty

For warranty information, go to the [Larson Davis Product Warranty](#) page.

Contact Larson Davis

Website

www.larsondavis.com

Worldwide Corporate Headquarters

Larson Davis - a PCB Piezotronics division

3425 Walden Avenue

Depew, NY 14043-2495 USA

Toll-free (in the US): 888-258-3222

Phone: 716-926-8243

USA fax: 716-926-8215

E-mail: LDSupport@pcb.com



Table Of Contents

Chapter 1	Introduction to the CAL1150 / CAL1200 -----	1
	1.1 Features	
	1.2 Included “In-The-Box”	
	1.3 Getting Started	
	1.3.1 Charging the Battery	
	1.3.2 Operating the Calibrator	
Chapter 2	Using the Calibrator -----	3
	2.1 Performing a Calibration	
	2.1.1 Performing the Calibration	
	2.2 Calibrator Level Corrections	
	2.2.1 Finding 1kHz Free-Field to Pressure Correction from Microphone Certificate	
	2.3 Calibration History	
	2.4 Environmental Precautions	
	2.5 Calibrating the Calibrator	
Chapter 3	Troubleshooting and Care -----	8
	3.1 Troubleshooting	
	3.2 Using G4 LD Utility with the CAL1150 / CAL1200	
	3.3 Replacing the Battery	
	3.4 Cleaning the Calibrator	
Appendix A	CAL1150/CAL1200 Specifications -----	A-1
	A.1 Standards Met	
	A.2 Technical Specifications	

Chapter **1** Introduction to the CAL1150 / CAL1200

The Larson Davis CAL1150 / CAL1200 sound level calibrators are battery-operated, precision instruments used for calibrating sound level meters and other sound measurement equipment at multiple levels.

They have been designed for both field and laboratory use. The accuracy has been calibrated to a reference traceable to the National Institute of Standards and Technology (NIST).

1.1 Features

The Larson Davis CAL1150 / CAL1200 Sound Level Calibrator have the following features:

- Meets CLASS 1 (CAL1200) or CLASS 2 (CAL1150) Acoustic Calibrator specifications
- Dual output levels: 94.0 dB and 114.0 dB (user-selectable)
- Output frequency: 1 kHz
- Internal rechargeable lithium-ion battery (user-replaceable)
- USB-C charge port
- Opening for 1/2" microphones
- LED Battery indication

1.2 Included “In-The-Box”

The original packaging for the CAL1150 / CAL1200 Calibrator includes the following:

- CAL1150 or CAL1200 Sound Level Calibrator
- USB-C to USB-C cable and USB-A to USB-C adapter (CBL242-03)
- Calibration Certificate (CER-CAL1150 or CER-CAL1200)

1.2.1 Optional Accessories

The following accessories are available separately from Larson Davis:

- Adapter for use with 1/8" microphones (ADP075)
- Adapter for use with 1/4" microphones (ADP109)
- Adapter for use with 3/8" microphones (ADP031)

1.3 Getting Started

The following sections provide the information needed to prepare the CAL1150 / CAL1200 for use. Referring to these sections before using the calibrator will provide the best results.

1.3.1 Charging the Battery

The CAL1150 / CAL1200 is shipped from Larson Davis with the internal lithium-ion battery charged to about 50%. It is recommended to charge the unit to full before first-time use.

Using the provided USB-C cable (and USB adapter if necessary), connect one end of the USB-C cable into the USB-C port on the side of the calibrator, and the other end to an appropriate power supply (5 V, >500 mA).

While charging, the calibrator will blink a green light in the top-right corner of the display about once per second. When fully charged, the light will turn solid green. A full charge takes approximately 3.5 hours.

NOTE The battery will slowly discharge over time, even while unit is off. If the unit is left unused for an extended period of time (several months), it may be necessary to recharge the battery.

1.3.2 Operating the Calibrator

The CAL1150 / CAL1200 has only two buttons: Power and dB.

To power on the calibrator, briefly push the power button. Repeat to turn off the calibrator.

When powered on, the calibrator will automatically begin emitting a tone. The level can be toggled between 114.0 dB and 94.0 dB by briefly pushing the “dB” button. The active level when the calibrator is powered off will be the active level when powered on again.

Holding the “dB” button for several seconds will switch the calibrator from “Normal Mode” to “Infinite Mode”. In Normal Mode, the calibrator will emit a tone for 120 seconds, then shut down. Any button press during this countdown resets it to 120 seconds. In Infinite Mode, the calibrator will emit a tone until the user turns the unit off or the battery dies. The light illuminating the sound pressure level is green in Normal Mode and blue in Infinite Mode.

Chapter 2 Using the Calibrator

In this chapter:

2.1	Performing a Calibration	-3
2.1.1	Performing the Calibration	
2.2	Calibrator Level Corrections	-4
2.2.1	Finding 1kHz Free-Field to Pressure Correction from Microphone Certificate	
2.3	Calibration History	-7
2.4	Environmental Precautions	-7
2.5	Calibrating the Calibrator	-7

2.1 Performing a Calibration

The CAL1150 / CAL1200 provides a nominal tone of 1 kHz, which requires no weighting corrections when used with sound level meters utilizing A, B, C or Z (Flat) frequency weighting.

A few things to consider before starting a calibration:

- Allow the calibrator sufficient time to adjust to environmental conditions, especially temperature. This allows for more accurate calibrations.
- Ensure that the ambient noise level is sufficiently low for an accurate calibration. Calibration levels will be influenced by less than 0.015 dB for external noise levels lower than 89 dB for the 114.0 dB level and 69 dB for the 94.0 dB level.
- Ensure the microphone grid cap is installed securely before inserting the microphone into the calibrator chamber to avoid microphone damage.
- When the CAL1150 / CAL1200 battery is too low for a calibration, the battery light will blink red a few times and the unit will not power on.
- It is good practice to perform a calibration check and any necessary adjustments of the instrument before beginning of a sequence of measurements. At the end of the measurement sequence, the calibration should be checked again. The inaccuracy of the measurements will be at least as large as the difference between the level measured for the initial calibration (or calibration check) and the level measured for the final calibration check.

2.1.1 Performing the Calibration

Step 1. Power on the calibrator and select the appropriate level.

Step 2. Insert the microphone into the calibrator chamber, as shown in **FIGURE 2-1** below. Ensure they fit together securely.

WARNING! Ensure the microphone's grid cap is installed before inserting the microphone into the calibrator. Failure to do so may result in microphone damage.

Step 3. Allow time for the calibrator to stabilize, typically less than 10 seconds. The calibrator is stable when the light illuminating the sound level stops flashing.

Step 4. Fix the arrangement vertically. If this is not possible, laying the arrangement on a flat surface is preferred to holding the arrangement by hand. Initiate the calibration on the instrument and wait for it to complete.

The preferred method for calibrating with the CAL1150 / CAL1200 is to mount the preamplifier in a fixed, vertical position.

When calibrating a meter that has an auto-calibration feature, ensure the calibrator has stabilized before accepting the results of the calibration on the meter.

FIGURE 2-1 Vertical Positioning



Step 5. To verify the calibration was successful, take a measurement while the calibrator is still active. If the reading is not within tolerance, try recalibrating, or refer to the instrument's manual for instructions on how to adjust the instrument.

2.2 Calibrator Level Corrections

Sound Field Influence depends on the type and model of a microphone used for calibration. The level measured by a microphone in an acoustic calibrator will also be affected by variances in the construction of the microphone. For pressure microphones, the influence is less than it is for free-field microphones. **Table 2.1** below provides typical 1000 Hz correction values for microphones manufactured by PCB Piezotronics and Larson Davis.

Table 2.1 Typical Correction Values for PCB/Larson Davis Microphones

Model	Correction (db @1000 Hz)
377A06	-0.06
377A07	-0.16
377A12	-0.03
377A14	0.00
377A15	0.00
377A21	-0.01
377B02	-0.12
377B11	0.00
377C01	-0.07
377C10	0.00
377C13	-0.03
377C41	-0.07
2520	-0.07
2530	0.00
2540	-0.04
2559	0.00
2560	0.00
2570	-0.23
2575	0.00
Other	See 2.2.1

To calculate the corrected calibrator level as found on your calibrator certificate, take the certified level from your calibrator and add the correction above for your microphone model.

Level Seen By Meter = Certified Calibrator Level + Correction Value

Example: A user wants to calibrate their sound level meter at 114 dB and 1000 Hz. The user's calibrator is certified to 114.03 dB at 1000 Hz. They are using a 377B02 Free-Field Microphone on their meter. At 1000 Hz, the correction from the table for the 377B02 is -0.12 dB.

$114.03 \text{ dB} + (-0.12 \text{ dB}) = 113.91 \text{ dB}$.

So, the user would set the calibration level in their sound level meter to 113.91 dB, instead of 114.0 dB, as shown in **FIGURE 2-2**.

FIGURE 2-2 SLM Calibration Settings

The screenshot shows a dark-themed interface for SLM Calibration Settings. At the top, the word "Calibration" is in blue. Below it, the text "Set up your calibration and/or calibrate now" is in white. There are two main settings: "Auto Calibrate" with a blue checkmark and the word "Enable" next to it, and "Level" with a white input field containing "113.91" and "dB" to its right.

If the user were calibrating at a different frequency or level, they would need to look at the calibrator's certification for that combination. The following table provides an example for each frequency and level available.

Table 2.2 Example Meter Calibration Setting with 377B02

Desired Frequency and Level	Example Calibrator Certification	Typical 377B02 Correction	Meter Calibration Setting
1000 Hz @ 114 dB	114.03 dB	-0.12 dB	113.91 dB
1000 Hz @ 94 dB	93.99 dB	-0.12 dB	93.87 dB

2.2.1 Finding 1kHz Free-Field to Pressure Correction from Microphone Certificate

The certificate included with a microphone typically has correction values for 251.2 Hz and 1000 Hz. These values can be used to calculate the free-field to pressure correction for the microphone. The correction is equal to the difference between the 1000 Hz value and the 251.2 Hz value.

Correction Value = (1000 Hz Certification in dB) - (251.2 Hz Certification in dB)

Example: The certificate below is for a specific 377B02 microphone. **Table 2.1** suggests the typical 1000 Hz correction for a 377B02 is -0.12 dB. The correction value can be calculated by subtracting the 251.2 Hz level from the 1000 Hz level.

FIGURE 2-3 Example 377B02 Microphone Certificate

Frequency [Hz]	Actuator [dB]	Free Field [dB]	Lower limit [dB]	Upper limit [dB]	Result
251.19	0.00	0.00	-0.50	0.50	Pass ±
316.23	0.00	0.01	-0.50	0.50	Pass ±
398.11	-0.01	-0.01	-0.50	0.50	Pass ±
501.19	-0.02	0.02	-0.50	0.50	Pass ±
630.96	-0.03	0.01	-0.50	0.50	Pass ±
794.33	-0.04	0.05	-0.50	0.50	Pass ±
1,000.00	-0.06	0.06	-0.50	0.50	Pass ±
1,059.25	-0.07	0.06	-0.50	0.50	Pass ±
1,122.02	-0.07	0.07	-0.50	0.50	Pass ±
1,188.50	-0.08	0.07	-0.50	0.50	Pass ±

Correction Value = (-0.06 dB @ 1000 Hz) - (0.00 dB @ 251.2 Hz) = -0.06 dB

The following table provides an example for each frequency and level available.

Table 2.3 Example Meter Calibration Setting Using Microphone Certification

Desired Frequency and Level	Example Calibrator Certification	Correction Calculation using Microphone Certification	Meter Calibration Setting
1000 Hz @ 114 dB	114.03 dB	-0.06 - 0.00 = -0.06 dB	113.97 dB
1000 Hz @ 94 dB	93.99 dB	-0.06 - 0.00 = -0.06 dB	93.93 dB

2.3 Calibration History

Larson Davis strongly recommends that a history of each calibration adjustment be kept for each piece of equipment. Normally, most modern equipment requires little or no adjustment once the initial calibration is performed. Systematic drifts are possible, and these should be recorded for corrective action.

Most Larson Davis sound level meters keep a history of each calibration change that can be retrieved. Please refer to the individual instrument manuals for details.

2.4 Environmental Precautions

While the CAL1150 / CAL1200 will perform normally under a wide variety of gradually changing environmental conditions, some precautions should be taken when sudden changes occur:

- The temperature of the CAL1150 / CAL1200 should be stable. If the temperature changes suddenly, such as moving between indoor and outdoor environments, allow at least 15 minutes, or more optimally, 45 minutes for the calibrator to adjust. This will ensure that the temperature compensation sensors are at the same temperature as the rest of the unit.
- While the CAL1150 / CAL1200 is not adversely impacted by humidity, avoid environments that promote condensation. Avoid settings where the relative humidity exceeds 90%, as condensation is likely to occur.
- The CAL1150 / CAL1200 is effectively immune to electric or magnetic fields. However, the instrument being tested may not be. Therefore, calibration should not be done near motors, dynamos, high voltage wires, or other sources of electromagnetic fields.

2.5 Calibrating the Calibrator

The American National Standards Institute states, “An acoustical calibrator should be recalibrated at least annually by the instrument manufacturer or an acoustical test laboratory qualified to perform calibration.” (American National Standards Institute. Specifications for Acoustical Calibrators. ANSI S1.40, 2006, par. 5.2)

If the CAL1150 / CAL1200 is being used to calibrate several instruments, then the history of calibration adjustments can usually pinpoint which instrument is drifting. If all the measurement instruments are drifting in the same direction by an amount considered significant, the CAL1150 / CAL1200 should be re-certified. If several instruments and several calibrators are in use, then the history of calibration adjustments would precisely pinpoint any problem pieces of equipment. Furthermore, it is probably satisfactory to recalibrate only one of the calibrators each year.

Chapter 3 Troubleshooting and Care

3.1 Troubleshooting

If the calibrator is behaving erratically, a hardware power-off may resolve the issue. This can be done by holding the power button for about 20 seconds.

The calibrator may also display an Error Code.

The 114dB LED will flash RED to indicate the error message. It is a long flash followed by a number of short flashes that indicate the error code number. e.g., Long, Short, Short would indicate error code 2 because of the two short flashes.

While the error code is displayed, pressing any button will return the device to normal operation. Rebooting the device is often the best way to see the error code again.

Refer to **Table 3.1 "Error Codes"** for details about the error code.

Table 3.1 Error Codes

Code	Error Name	Error Description
2	Sensor Failure	One or more of the sensors (Pressure, Temperature, Humidity) has failed. This means the device cannot correct for environmental conditions which could result in bad calibrations.
3	Audio Failure	Either the internal reference microphone is not working or the speaker is not producing a calibration tone. If you can hear the speakers cal tone, then this means the internal reference microphone is damaged or disconnected. This will likely mean the calibrator will never show it is stable.

3.2 Using G4 LD Utility with the CAL1150 / CAL1200



The CAL1150 / CAL1200 can be connected to G4 LD Utility in order to read and update the firmware version. Using a USB-C cable, connect the calibrator to a computer and open G4 LD Utility. Click on the calibrator (listed as CAL1150 XXXXX or CAL1200 XXXXX) under the “Meters” panel on the left side of the window to see a range of information about the calibrator including the firmware version. To update the firmware, click on the three dots (“...”), then click on “Upgrade Firmware”. A dialog box will open, and the newest firmware version should be selected automatically. Click “Upgrade Firmware” and wait for the process to complete.

3.3 Replacing the Battery


The CAL1150 / CAL1200 comes with a rechargeable lithium-ion battery. We recommend that you use only a lithium-ion battery approved by Larson Davis. The CAL1150 / CAL1200 will run for up to 15 hours on one full charge, or approximately 3 months if run for 10 min/day. The battery should be replaced after 500 charge cycles or 3 years, whichever comes first.

NOTE If the CAL1150 / CAL1200 battery is deeply discharged, pressing the power button may have no effect. In this situation, the unit may need to be charged via USB for 15-30 minutes before it will turn on. After plugging into USB the CAL1150 / CAL1200 battery symbol should flash red before turning off while a battery charge recovery occurs.

To replace the battery:

Step 1. Remove the screw securing the battery door (see **FIGURE 3-1** below).

FIGURE 3-1 Battery Door Screw Location
Battery Door Screw

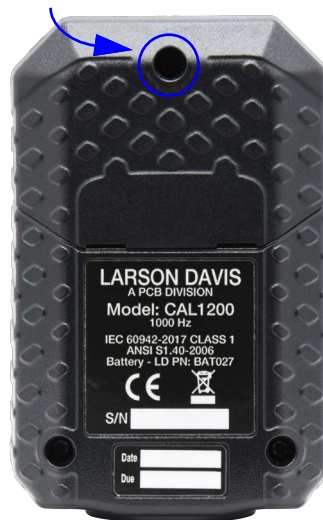

Step 2. Slide the battery door up away from the rest of the calibrator to remove it.

Step 3. Gently pull the existing battery from the battery terminals.

Step 4. Insert the replacement battery into the terminals, ensuring proper polarity as marked on the circuit board.

NOTE If the battery is inserted backwards, the calibrator will not power on unless connected to power over USB. When connected to USB, the calibrator will assume the battery is dead and attempt to charge it, but a reversed battery cannot be charged. A reversed battery will not cause damage to the calibrator.

Step 5. Slide the battery door back into place, and re-insert the screw.

3.4 Cleaning the Calibrator

In most circumstances, wiping down the CAL1150 / CAL1200 with a damp microfiber cloth is sufficient for cleaning. If desired, isopropanol can be used instead of water. DO NOT submerge the calibrator in liquids. If the chamber of the calibrator needs to be cleaned, take care not to allow any liquids through the vent holes onto the speaker.

Appendix

A

CAL1150/CAL1200 Specifications

The specifications contained in this appendix are subject to change without notice. Please refer to calibration and measurement results for data on a specific unit.

In this Appendix:

A.1 Standards Met




A.2 Technical Specifications

A-1

A-2

A.1 Standards Met


The CAL1150/CAL1200 sound level calibrator complies with the following international standards:

Specifications and Verification Procedures for Sound Calibrators	ANSI S1.40-2006 Class 1: CAL1200 Class 2: CAL1150	
Sound Calibrators	EN 60942:2018 Class 1: CAL1200 Class 2: CAL1150	
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use	IEC 61010-1:2010	
EMC Standards	EMC Low Voltage Directives EMC Immunity: EN 61000-6-2:2005 per EN 60942:2018, EN 61000-3-2:2005+A1:2008+A2:2009, EN 61000-3-3:2008 (Device is immune to radio-frequency fields in all orientations. Minimum immunity occurs while charging over USB.) EMC Emission: EN 61000-6-3:2007+A1:2011 per EN 60942:2018 (Maximum emissions occur while charging over USB; frequency and level have no effect.)	
		CE-mark indicates compliance with the EMC, Low Voltage, and RoHs Directives
		WEEE mark indicates compliance with the EU WEEE Directive
		UKCA mark indicates conformity with the applicable requirements for products sold within Great Britain

A.2 Technical Specifications

Calibration sound pressure level	94.0 dB and 114.0 dB \pm 0.2 dB (CAL1200) \pm 0.5 dB (CAL1150) re: 20 μ Pa @ 101.3 kPa, 23 °C and 50% RH (114.0 dB is the principal sound pressure level)
Equivalent free-field level	93.88 dB and 113.88 dB for 1/2" free-field microphones, including 377B02 and other WS2F-compliant free-field microphones See 2.2.1 .
Specified frequency	1000.0 Hz \pm 1 Hz
Total harmonic distortion	< 2%
Stabilization time	< 10 seconds (@94dB ambient noise < 69 dB, @114dB ambient noise < 89 dB) Allow >45 minutes when moving calibrator between environments with different temperatures or humidity (i.e. indoors to outdoors).
Static pressure range	65 kPa to 108 kPa, SPL variation < \pm 0.2 dB
Temperature range	-10 °C to 50 °C, SPL variation < \pm 0.2 dB, Frequency variation < \pm 2 Hz
Humidity range	10% to 90% relative humidity (non-condensing), SPL variation < \pm 0.2 dB, Frequency variation < \pm 2 Hz
Storage temperature	-40 °C to 60 °C
Storage humidity	0% to 90% relative humidity (non-condensing)
Load volume sensitivity	< 0.10 dB for effective load volume < 200 mm ³
Dimensions	Length 106.1 mm (4.18 in.) Width 63.4 mm (2.5 in.) Thickness 25.9 mm (1.02 in.)
Weight	156 grams (5.5 oz.)
User-replaceable lithium-ion battery (BAT027)	Run time: 15 hours (typical) Charge time: 3.5 hours (typical)
Battery specifications	3.7 V nominal, 1100 mAh
USB power	4.5 to 5.5 V, \geq 500 mA
Traceability	Utilize a 1/2" IEC 61094-4 (WS2P) microphone in conjunction with other traceable measuring instruments to establish traceability of the output level and frequency of the Model CAL1150/CAL1200
Microphone compatibility	According to IEC 61094-4:1995: 1/2" WS2P, WS2F and WS2D microphones 1/4" WS3P, WS3F and WS3D microphones with ADP109 adapter. According to IEC 61094-1:2000: 1/2" LS2P

FIGURE A-1 Typical Acoustic Isolation in Chamber

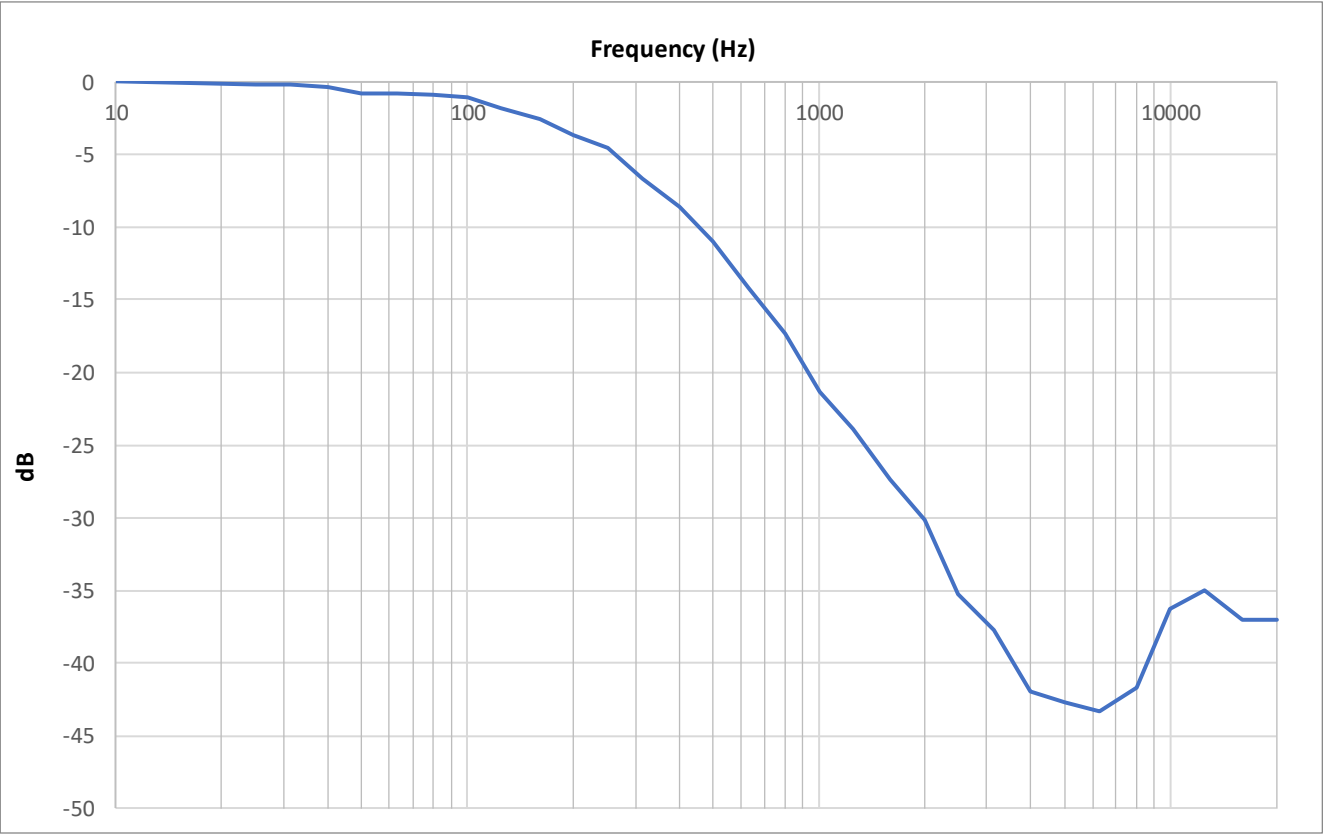



Larson Davis - a PCB Piezotronics division
LarsonDavis.com

P/N ICAL1200.01 or ICAL1150.01, CAL1150/CAL1200 Technical Reference Manual
Revision A

©2024 PCB Piezotronics, Inc.

Larson Davis Corporate Headquarters

3425 Walden Avenue
Depew, NY 14043-2495 USA

888.258.3222 (Toll-free in the US)
716.926.8243
716.926.8215 (USA fax)
LDsupport@pcb.com